

DuroVac Data Sheet

Hammant Sealed Dump Hopper

WARNING:
**Failure to read and follow these instructions
 can result in serious personal injury!**

The following product was shipped to you and it must be drawn to your attention that **the machine is potentially hazardous to those not trained in its use or operation.** Therefore it is important the following information be given to those persons who operate or use this equipment. Weight capacity shown is for dumpers in factory supplied condition and operated with care according to the limits and instructions noted below:

1. Do not exceed the weight capacity of the dumper.
2. Do not stand near dumper while in operation. This product is a dump body and persons must be clear of the dumping action.
3. Do not stack dumpers upon one another.
4. Use only with a forklift truck by lifting with the fork receptacles provided in the base.
5. The dumper may only be lifted by a crane if lifting lugs are supplied with the dumper. Never dump while dumper is suspended from a crane.
6. Never dump while dumper is resting on floor or platform.
7. Operator must stand behind dumper while tipping latch.
8. Do not stand inside or on top of the dumper as the unit is not designed to handle people.
9. Use a rope or pole with hook to unlatch.
10. The chain beside handle is not a latch. It is provided as a secondary security to prevent latch handle from tripping inadvertently during handling.

WEIGHT (Lbs.) CAPACITY OF HAMMANT DUMPERS				
Side Plate Thickness.....			
CuYd	.125	.1875	.25	.375
$\frac{3}{4}$	1500	3000	6000	6000
1	2000	4000	6000	6000
1 ½	2000	4000	6000	6000
2	2000	4000	6000	6000